-hp-
LIBRARY
COPY

MODEL

65

HEWLETT-PACKARD
9865A CASSETTE MEMORY

PERIPHERAL MANUAL

Manual Changes

Model 9865A Cassette Memory
Peripheral Manual

Manual Part No. 09865-90000

Computer Museum

Page 1-1:

Please replace Table 1 with this:

Table 1. Supplied Equipment

DESCRIPTION	QUANTITY	-hp- PART NUMBER
Peripheral Manual	1	09865-90000
File Storage Forms	1 pad	09865-90001
Digital Tape Cassette	3	9162-0050
Select Code Labels	1 pkg.	7120-2940
Spare Fuses:		
.25A, 250V, Slow Blo	2	2110-0201
.5A, 250V, Slow Blo	1	2110-0202
Power Cords:		
AC Receptacle	1	8120-1378
Inter-Instrument	1	8120-1579
Interface Cable	1	09865-61603
Tape Head Cleaner	1	8500-1251
Cotton Applicators	10	8520-0023

Page 1-4:

Please replace text on page 1-4 with the following:

INSTALLATION

Before connecting the power cord to the back of your Cassette Memory check the setting of the voltage selector card (see the following photos). The number visible indicates which voltage is set. If the card is set to the available power line voltage, you may skip the next instructions and go to Page 1-6.

To change the voltage setting, please refer to Figure 2 and the following 'NOTE'.

NOTE
For 120V operation use a .5 amp, Slow Blo fuse, -hp- Part No. 2110-0202.
For 240V operation use a .25 amp, Slow Blo fuse, -hp- Part No. 2110-0201.

To change the fuse, refer to Figure 2.

HEWLETT · PACKARD

HP Computer Museum
www.hpmuseum.net

For research and education purposes only.

PERIPHERAL MANUAL

Computer Museum

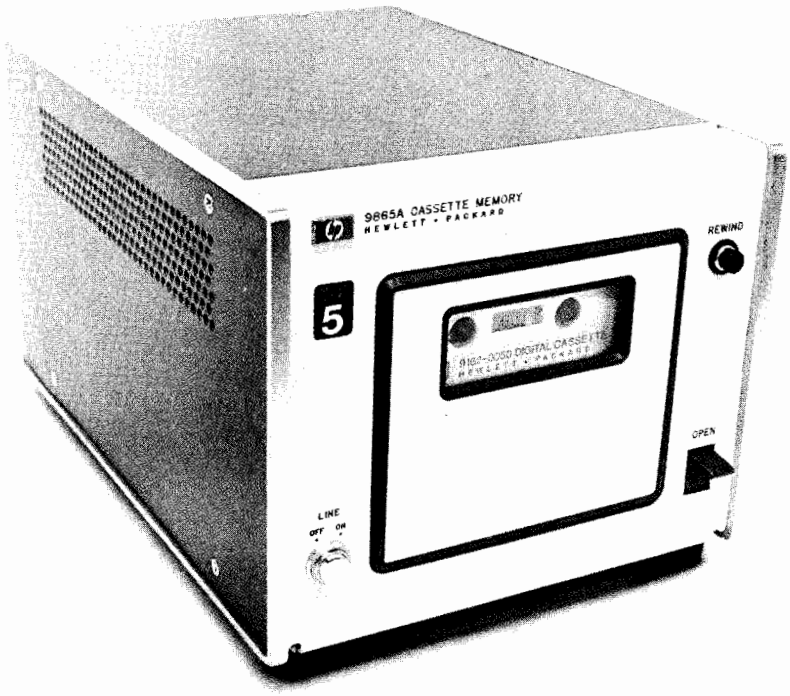

9865A CASSETTE MEMORY

HEWLETT–PACKARD CALCULATOR PRODUCTS DIVISION
P.O. Box 301, Loveland, Colorado 80537, Tel. (303) 667-5000
Rue du Bois-du-Lan 7, CH-1217 Meyrin 2, Geneva, Tel. (022) 41 54 00

Copyright by Hewlett–Packard Company 1972

TABLE OF CONTENTS

CHAPTER 1. GENERAL INFORMATION

INTRODUCTION

Supplied Equipment 1-1
Specifications 1-1
The Tape Cassette 1-1
Instrument Identification 1-2
Initial Inspection 1-3
Service Contracts 1-3

INSTALLATION

Power Requirements 1-3
Grounding Requirements 1-3
Setting the Line Voltage 1-4
Changing the Fuse 1-4
Cassette Memory Installation 1-6
The Cassette Control Block 1-6
Cassette Memory Select Code 1-6
Electrical Inspection 1-8

CHAPTER 2. CASSETTE MEMORY OPERATION

Front Panel Controls 2-1
The LINE Switch 2-1
The Tape Release Lever 2-1
The REWIND Button 2-1
Loading Tape 2-2
The Protect Tabs 2-2
Storing Tape Cassettes 2-2

CHAPTER 3. INSTRUMENT MAINTENANCE

Cleaning the Tape Head 3-1
Changing the Front Panel Lamp 3-2

APPENDIX

Technical Specifications

PREFACE

This manual contains installation and general user-instructions for the Model 9865A Cassette Memory.

If you're using the cassette memory with a 9830 Calculator, all operating instructions are contained in the 9830 Operating and Programming Manual. However, if a 9810 or 9820 Calculator is used, a Cassette Memory Control Block (ROM Block) is required to enable your calculator to control the cassette memory: in that case, refer to the manual supplied with the ROM Block.

NOTES

INTRODUCTION

The -hp- Model 9865A Cassette Memory provides bulk storage of 9800-Series calculator program and data information. The cassette memory stores data or programs in individual files on a magnetic tape cassette. The quantity and the size of the files on each tape cassette are specified by the user. Stored data or program information may be recalled and utilized by the calculator; or data may be recalled, modified, and restored on the tape. Data files stored by the cassette memory are compatible with other 9800-Series calculator/cassette memory systems. For example, data files which are stored from a Model 10 Calculator can be loaded into a Model 20 Calculator.

See the operating manual supplied with your calculator's cassette control block for specific information on how to use the cassette memory.

SUPPLIED EQUIPMENT

The items listed below are supplied with the cassette memory.

Table 1. Supplied Equipment

DESCRIPTION	QUANTITY	-hp- PART NUMBER
Peripheral Manual	2	09865-90000
File Storage Forms	1 pad	09865-90001
Digital Tape Cassette	3	9162-0050
Select Code Labels	1 pkg.	7120-2940
Spare Fuses:		
.25A, 250V, Normal Blo	1	2110-0004
.5A, 250V, Normal Blo	1	2110-0012
Power Cords:		
AC Receptacle	1	8120-1378
Inter-Instrument	1	8120-1579
Interface Cable	1	09865-61603
Tape Head Cleaner	1	8500-1251
Cotton Applicators	100	8520-0023

SPECIFICATIONS

Cassette memory specifications are listed in the APPENDIX at the back of this manual.

THE TAPE CASSETTE

The tape cassette recommended for use in the cassette memory is shown in Figure 1. This cassette is a precision unit and contains three-hundred feet of digital-quality, magnetic recording tape. These and other important characteristics make this tape cassette ideally suited for use in the cassette memory.

INTRODUCTION

THE TAPE CASSETTE (continued)

The -hp- tape cassette is available singly or in quantities at a reduced price. When ordering the tape cassette, specify -hp- part no. 9162-0050.

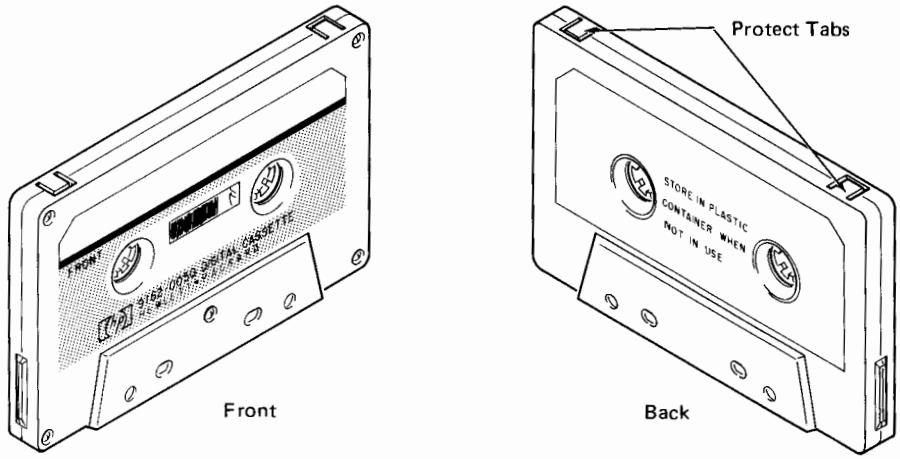

Figure 1. The Tape Cassette

Although many other available tape cassettes will initially work in the cassette memory, many of these products will not provide reliable cassette memory recordings. Also, since the use of some tape cassettes will actually damage the cassette memory, -hp- cannot ensure cassette memory operation if it is used with a tape cassette not supplied by -hp-.

For additional information on requirements for the tape cassette used in the cassette memory, contact your nearest -hp- Sales and Service Office; office locations are listed at the back of this manual.

> **CAUTION**
>
> THE CASSETTE MEMORY SERVICE WARRANTY DOES NOT COVER DAMAGE WHICH RESULTS FROM THE USE OF A TAPE CASSETTE NOT SUPPLIED BY HP.

INSTRUMENT IDENTIFICATION

The cassette memory is identified by the serial number located on the instrument's back panel.

Computer Museum

INTRODUCTION

INITIAL INSPECTION

The cassette memory was carefully inspected both mechanically and electrically before shipment. It should be free of mars or scratches and in perfect electrical order upon receipt. Carefully inspect the cassette memory for physical damage caused in transit; if there is any damage, file a claim with the carrier. If you wish to verify the electrical performance of the cassette memory, use the inspection procedure provided in the operating manual supplied with the cassette memory control block (ROM block) required for your calculator.

SERVICE CONTRACTS

Service contracts are available for the cassette memory. For further information contact your nearest -hp- Sales and Service Office; locations are listed at the back of this manual.

INSTALLATION

POWER REQUIREMENTS

The cassette memory will operate within the voltage range of from 98 to 126 volts ac or 198 to 252 volts ac. The line frequency must be within 48 to 66 Hz. The cassette memory requires a maximum of 50 voltamps.

The voltage selector card (see Figure 2), located in the power module on the rear of the mainframe, selects a nominal operating voltage range of either 100V, 120V, 220V or 240V. A different fuse is required for operation in either the 100 – 120V or 220 – 240V range. Information on how to set the voltage selector and how to change fuses is presented in the following pages.

CAUTION

DO NOT APPLY AC POWER TO THE CASSETTE MEMORY UNLESS THE LINE VOLTAGE SELECTOR IN THE POWER MODULE IS SET TO THE PROPER POSITION' DAMAGE TO THE CASSETTE MEMORY CAN RESULT FROM FAILURE TO OBSERVE THIS PRECAUTION.

GROUNDING REQUIREMENTS

To protect operating personnel, the NATIONAL ELECTRICAL MANUFACTURERS' ASSOCIATION (NEMA) recommends that the cassette memory cabinet be grounded. The cassette memory is equipped with a three-conductor power cable which, when connected to an appropriate receptacle, grounds the cabinet of the cassette memory. The center pin of the power cable connector is the ground connection.

INSTALLATION

SETTING THE VOLTAGE SELECTOR

Before connecting the power cord to the back of your calculator check the setting of the voltage selector card (see the following photos). The number visible indicates which voltage is set. If the card is set to the available power line voltage, you may skip the next instructions and go to Page 1-6.

To change the voltage setting, please refer to Figure 2 and the following 'NOTE'.

CHANGING THE FUSE

> NOTE
>
> For 120V operation use a .5 amp, Normal Blo fuse, -hp- Part No. 2110-0012.
>
> For 240V operation use a .25 amp, Normal Blo fuse, -hp- Part No. 2110-0004.

To change the fuse, refer to Figure 2.

INSTALLATION

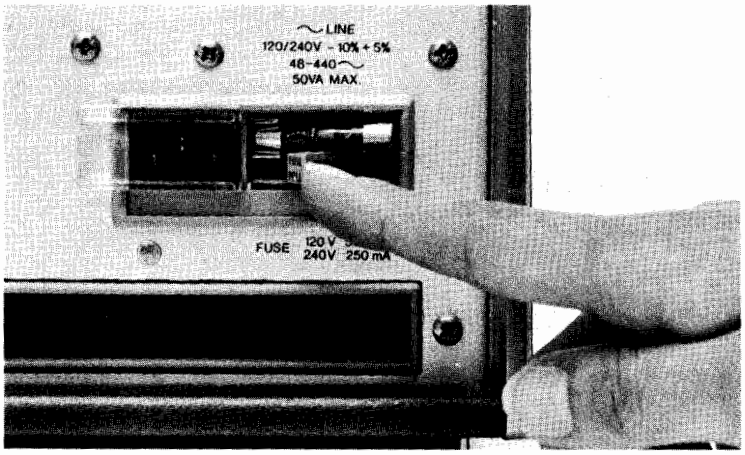

1. Slide the plastic window to the left and move the FUSE PULL lever to the left (removing the fuse).

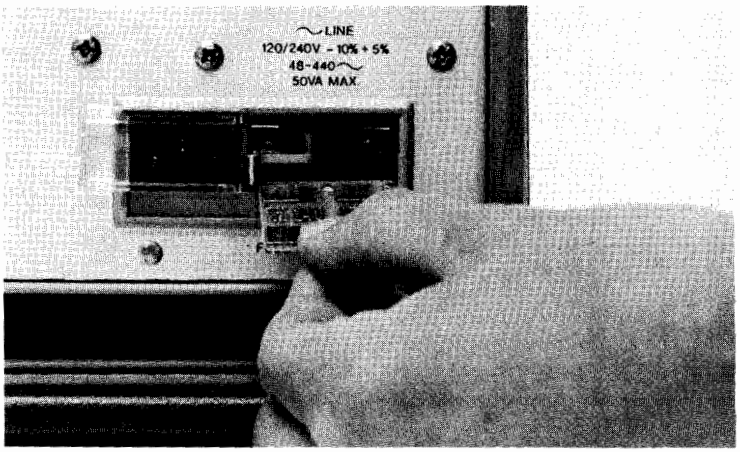

2. Position the line voltage selector such that the number indicating the required voltage setting is on the left.

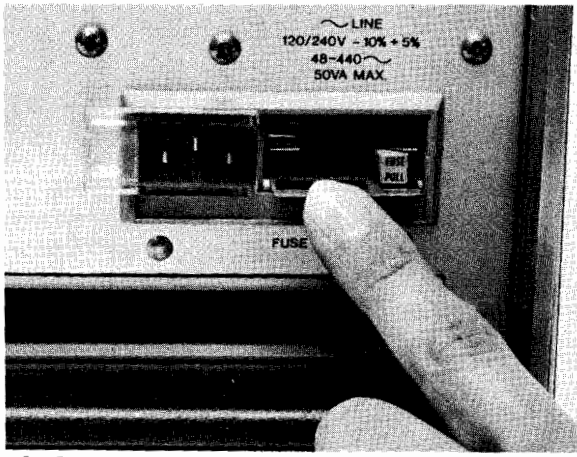

3. Push the line voltage selector into the power module, insert the proper fuse, and slide the plastic window to the right.

Figure 2. The Power Module

INSTALLATION

CASSETTE MEMORY INSTALLATION

Figure 3 shows the cable interconnections required to connect the cassette memory to your 9800-Series calculator. The calculator-end of the interface cable can be plugged into any of the unused calculator I/O connectors. The inter-instrument power cord can be plugged into any unused calculator power receptacle; if all power receptacles are in use, utilize the other ac power cord supplied to connect the cassette memory to the ac power source.

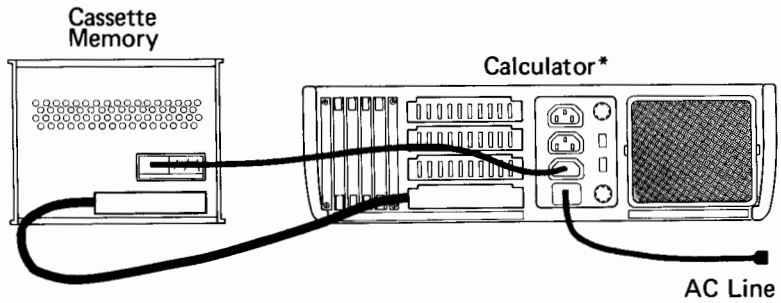

* -hp- 9800-Series calculator with the proper cassette control block installed.

Figure 3. Cassette Memory Installation

THE CASSETTE CONTROL BLOCK

An appropriate cassette control block (ROM block) must be plugged into your calculator before the cassette memory can be used in your 9800 system.* Any -hp- Sales and Service Office can assist you in selecting the correct cassette control block for your calculator.

CASSETTE MEMORY SELECT CODE

Since all calculator peripheral devices are connected in a 'party-line' fashion, each device must have a unique 'address' so that the calculator can specify which device should respond to which operation. The cassette memory's address (or select code) consists of a one-digit number and is determined by the circuitry on the interface card (see Figure 4). Each calculator-to-cassette memory operation must include the correct select code, thereby instructing the cassette memory interface card to respond to the operation while all other cards ignore it.

Each cassette memory is set to select code 5 at the factory. However, by using the following procedure, the cassette memory may be set to respond to any one of nine select codes.

*The 9830 Calculator is an exception to this rule.

INSTALLATION

NOTE

The following procedure requires that you are familiar with printed circuit soldering techniques. If you require assistance, contact your nearest -hp- Sales and Service Office.

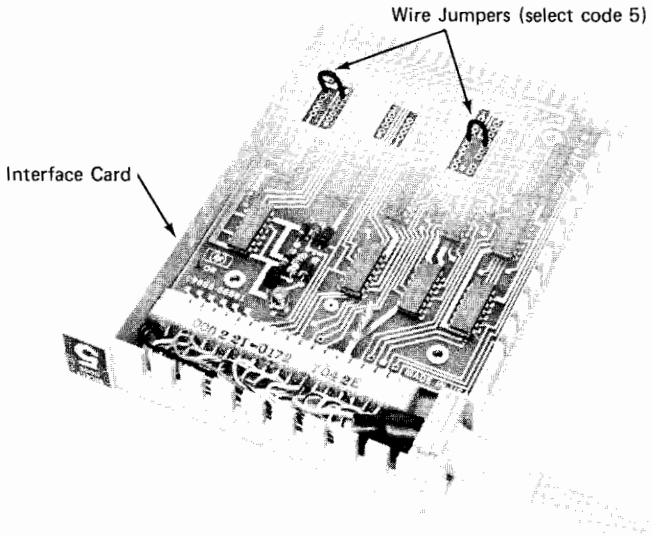

Figure 4a.

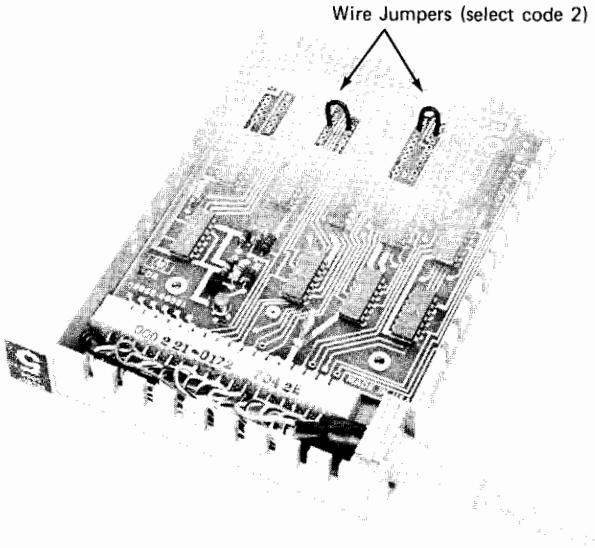

Figure 4b.
Figure 4. Changing the Select Code

INSTALLATION

CASSETTE MEMORY SELECT CODE (continued)

1. Switch the calculator and the cassette memory OFF.
2. Disconnect the cassette memory interface card from the calculator. Remove the four screws located on the top of the card assembly; then, turn the card over and lift off the bottom cover.
3. Locate the two select code jumper wires (see Figure 4). Notice that each wire connects one set of holes on the interface card. The sets of holes are numbered 1 through 9 — each set corresponds to a specific select code number. Figure 4a shows the jumper wires set to select code 5, and Figure 4b shows the wires set to select code 2.
4. To change the select code, **both** wire jumpers must be unsoldered, inserted into the sets of holes which correspond to the desired select code, and resoldered.

> **CAUTION**
>
> USE EXTREME CARE WHEN APPLYING HEAT TO THE CIRCUIT BOARD, AS THE BOARD CAN BE EASILY DAMAGED BY EXCESSIVE HEAT.

5. After resoldering both wire jumpers, carefully examine the board to ensure that excessive solder is not touching any of the adjacent holes. Remove any loose particles of solder from the board.
6. Reposition the board in the interface top cover and replace the bottom cover. Secure the bottom cover with the four screws removed in step 2.
7. Replace the Select Code Labels on the cassette memory mainframe and on the interface card with ones which indicate the new select code. A package of labels is supplied with your cassette memory.
8. Reconnect the interface card to the calculator and switch the calculator and the cassette memory ON. Verify that the desired select code is set by performing some cassette memory operations (or running a 'cassette memory program') which specify the new select code.

ELECTRICAL INSPECTION

The procedure to verify the electrical performance of the cassette memory is contained in the operating information supplied with either your 9830 Calculator or the appropriate cassette control block.

FRONT PANEL CONTROLS

The 'local' controls on the cassette memory are shown in Figure 5. Except for operation of the controls shown, all cassette memory operations are performed 'remotely', from the calculator.

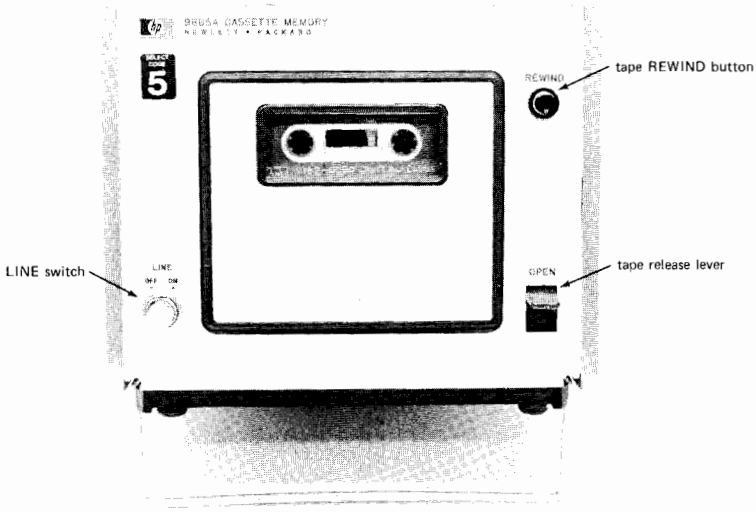

Figure 5. Controls on the Cassette Memory

THE LINE SWITCH

The LINE switch controls the application of ac power to the cassette memory. The LINE switch lens is illuminated when power is applied to the instrument.

THE TAPE RELEASE LEVER

Pressing down on the Tape Release Lever causes the tape transport door to open. In general, the operator should not open the door unless the tape is positioned on clear-leader. If the cassette memory is rewinding or performing a remote operation when the door is opened, the operation will be immediately terminated and program operation will be halted.

THE REWIND BUTTON

Pressing REWIND causes the tape to completely rewind and automatically stop on the beginning clear-leader. However, if the tape is to be rewound and it is stopped on the ending clear-leader, REWIND must be pressed and held down for approximately two seconds to enable the tape to advance beyond the ending clear-leader.

> NOTE
>
> The REWIND button is disabled while the cassette memory is performing a remote operation. Also, the REWIND *operation* is disabled whenever the calculator is switched OFF.

Computer Museum

CASSETTE MEMORY OPERATION

LOADING TAPE

To load tape into the cassette memory:

1. Open the tape transport door;
2. Insert the tape cassette into the transport cassette guides, such that the front of the cassette is facing toward the tape transport door; (be sure the tape cassette is firmly seated in the tape transport)
3. Close the door (see Figure 6).

After loading the cassette memory, press REWIND to ensure that the tape is fully rewound.

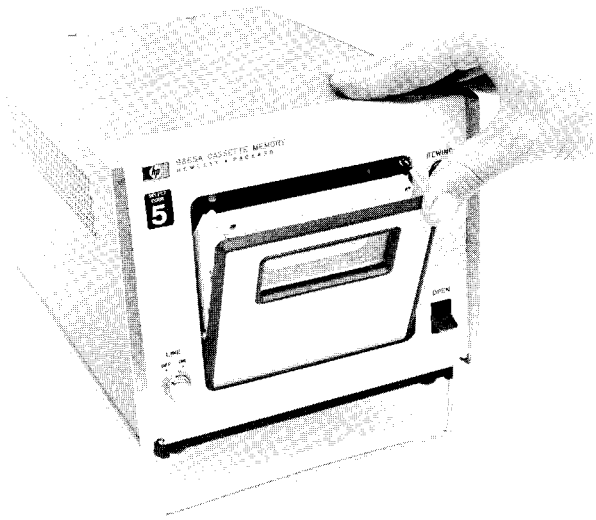

Figure 6. Loading Tape

THE PROTECT TABS

The information recorded on a tape cassette can be protected from loss resulting from subsequent recording operations by removing both protect tabs on top of the cassette (see Figure 1 on Page 1-2). The cassette memory will immediately terminate any record operation attempted on a cassette which has both protect tabs removed.

STORING TAPE CASSETTES

Each tape cassette is supplied with a plastic case; this should be used when storing the cassette, as a magnetic tape is delicate and can be easily damaged. Also, the tape should be fully rewound (on clear-leader) before it is removed from the cassette memory.

As with most magnetic tape products, the information stored in the tape cassette can be altered or destroyed by exposing the tape to a strong magnetic field, such as is produced by a bulk tape eraser, a toy magnet, or some metal-detection devices (e.g., equipment used at many airports). In some cases, the use of a steel container, such as an index box, will help protect the tape from magnetic fields.

CLEANING THE TAPE HEAD

Computer Museum

As with most precision recording equipment, the cassette memory can be expected to provide trouble-free operation only if the user adheres to a scheme of regular preventative maintenance. The following tape-head cleaning procedure should be performed after every eight hours of cassette operation. Also, this procedure should be performed prior to making a 'permanent' cassette memory recording.

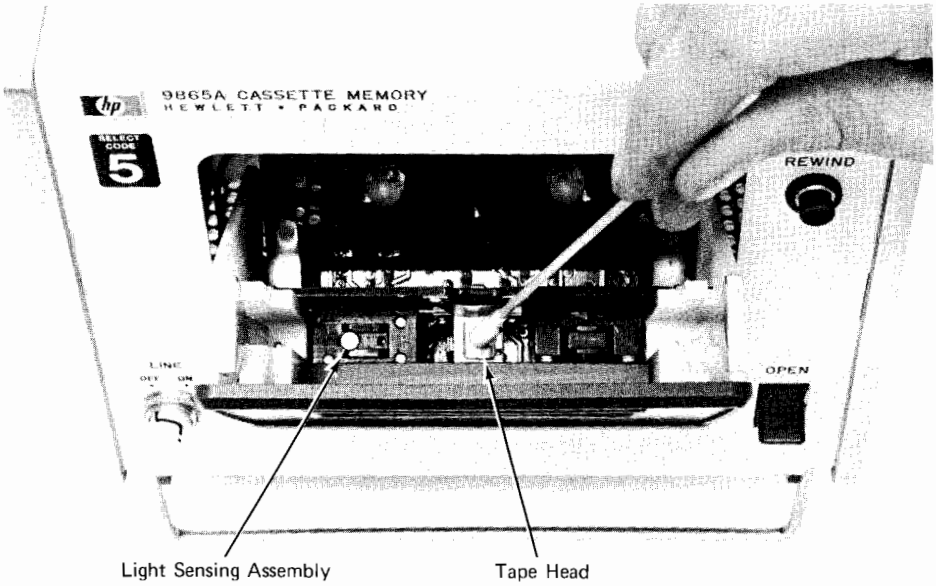

Figure 7. Cleaning the Tape Head

To clean the tape head:

1. Rewind and remove the tape cassette, then switch the cassette memory OFF.
2. Locate the tape head (see Figure 7). Remove any dust or other foreign material that has accumulated in the vicinity of the tape head.

> **WARNING**
>
> READ ALL INFORMATION SUPPLIED WITH THE TAPE HEAD CLEANER BEFORE OPENING THE CONTAINER.

3. The tape head should be cleaned with a cotton applicator which has been dampened with head cleaning solution or denatured alcohol. It is sufficient to gently wipe the top of the head a few times, and then repeat wiping the head with a clean applicator.

CLEANING THE TAPE HEAD (continued)

> **CAUTION**
>
> DO NOT ALLOW THE CLEANING SOLUTION TO TOUCH THE TAPE-TRANSPORT DOOR OR THE LIGHT-SENSING ASSEMBLY (SEE FIGURE 7).

4. Close the tape-transport door after cleaning the tape head. A good practice is to close the door whenever the cassette memory is not in use, thus preventing dust from accumulating in the tape transport.

CHANGING THE FRONT PANEL LAMP

> **WARNING**
>
> BEFORE CHANGING THE LINE LAMP, BE SURE THE CASSETTE MEMORY IS DISCONNECTED FROM THE AC POWER SOURCE.

The LINE switch on the front panel of the cassette memory contains a neon light bulb. If the cassette memory functions normally, but the LINE switch fails to light, the bulb is probably burned out. To change the bulb, switch the cassette memory OFF and pull the switch lens straight out; the bulb will come out with the lens. Remove the old bulb and place the new one, -hp- Part No. 2140-0244, into the lens. Now reinstall the lens.

SPECIFICATIONS

Size:	6-2/3" high X 8" wide X 11" deep (16.93 cm X 20.32 cm X 27.94 cm).
Weight:	11 pounds (5 kg).
Power Requirements:	98 – 126V ac or 198 – 252V ac, 48 to 66 Hz, 50 watts max.
Temperature Range:	0°C to 45°C (operating); –40°C to 75°C (storage, without tape cassette).
Humidity Range:	Up to 90% rel. Hum., non-condensing.
Search Speed:	Approximately 130 ft/min (26 in/sec).
Data Storage Capacity:*	> 6000 data registers. (See your Cassette Control Block Operating Manual for the program storage capacity).
Tape Life:*	> 1000 complete head passes.

* When using the -hp- Tape Cassette.

SALES & SERVICE OFFICES

UNITED STATES

ALABAMA
P.O. Box 4207
2003 Byrd Spring Road S.W.
Huntsville 35802
Tel: (205) 881-4591
TWX: 810-726-2204

ARIZONA
2336 E. Magnolia St.
Phoenix 85034
Tel: (602) 244-1361
TWX: 910-951-1330

5737 East Broadway
Tucson 85711
Tel: (602) 298-2313
TWX: 910-952-1162

CALIFORNIA
1430 East Orangethorpe Ave.
Fullerton 92631
Tel: (714) 870-1000
TWX: 910-592-1288

3939 Lankershim Boulevard
North Hollywood 91604
Tel: (213) 877-1282
TWX: 910-499-2170

6305 Arizona Place
Los Angeles 90045
Tel: (213) 649-2511
TWX: 910-328-6148

1101 Embarcadero Road
Palo Alto 94303
Tel: (415) 327-6500
TWX: 910-373-1280

2220 Watt Ave.
Sacramento 95825
Tel: (916) 482-1463
TWX: 910-367-2092

9606 Aero Drive
P.O. Box 23333
San Diego 92123
Tel: (714) 279-3200
TWX: 910-335-2000

COLORADO
7965 East Prentice
Englewood 80110
Tel: (303) 771-3455
TWX: 910-935-0705

CONNECTICUT
12 Lunar Drive
New Haven 06525
Tel: (203) 389-6551
TWX: 710-465-2029

FLORIDA
P.O. Box 24210
2806 W. Oakland Park Blvd.
Ft. Lauderdale 33307
Tel: (305) 731-2020
TWX: 510-955-4099

P.O. Box 13910
6177 Lake Ellenor Dr.
Orlando, 32809
Tel: (305) 859-2900
TWX: 810-850-0113

GEORGIA
P.O. Box 28234
450 Interstate North
Atlanta 30328
Tel: (404) 436-6181
TWX: 810-766-4890

HAWAII
2875 So. King Street
Honolulu 96814
Tel: (808) 955-4455

ILLINOIS
5500 Howard Street
Skokie 60076
Tel: (312) 677-0400
TWX: 910-223-3613

INDIANA
3839 Meadows Drive
Indianapolis 46205
Tel: (317) 546-4891
TWX: 810-341-3263

LOUISIANA
P. O. Box 840
3239 Williams Boulevard
Kenner 70062
Tel: (504) 721-6201
TWX: 810-955-5524

MARYLAND
6707 Whitestone Road
Baltimore 21207
Tel: (301) 944-5400
TWX: 710-862-9157

P.O. Box 1648
2 Choke Cherry Road
Rockville 20850
Tel: (301) 948-6370
TWX: 710-828-9684

MASSACHUSETTS
32 Hartwell Ave.
Lexington 02173
Tel: (617) 861-8960
TWX: 710-326-6904

MICHIGAN
23855 Research Drive
Farmington 48024
Tel: (313) 476-6400
TWX: 810-242-2900

MINNESOTA
2459 University Avenue
St. Paul 55114
Tel: (612) 645-9461
TWX: 910-563-3734

MISSOURI
11131 Colorado Ave.
Kansas City 64137
Tel: (816) 763-8000
TWX: 910-771-2087

148 Weldon Parkway
Maryland Heights 63043
Tel: (314) 567-1455
TWX: 910-764-0830

***NEVADA**
Las Vegas
Tel: (702) 382-5777

NEW JERSEY
W. 120 Century Road
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

1060 N. Kings Highway
Cherry Hill 08034
Tel: (609) 667-4000
TWX: 710-892-4945

NEW MEXICO
P.O. Box 8366
Station C
6501 Lomas Boulevard N.E.
Albuquerque 87108
Tel: (505) 265-3713
TWX: 910-989-1665

156 Wyatt Drive
Las Cruces 88001
Tel: (505) 526-2485
TWX: 910-983-0550

NEW YORK
6 Automation Lane
Computer Park
Albany 12205
Tel: (518) 458-1550
TWX: 710-441-8270

1219 Campville Road
Endicott 13760
Tel: (607) 754-0050
TWX: 510-252-0890

New York City
Manhattan, Bronx
Contact Paramus, NJ Office
Tel: (201) 265-5000
Brooklyn, Queens, Richmond
Contact Woodbury, NY Office
Tel: (516) 921-0300

82 Washington Street
Poughkeepsie 12601
Tel: (914) 454-7330
TWX: 510-248-0012

39 Saginaw Drive
Rochester 14623
Tel: (716) 473-9500
TWX: 510-253-5981

5858 East Molloy Road
Syracuse 13211
Tel: (315) 454-2486
TWX: 710-541-0482

1 Crossways Park West
Woodbury 11797
Tel: (516) 921-0300
TWX: 510-221-2168

NORTH CAROLINA
P.O. Box 5188
1923 North Main Street
High Point 27262
Tel: (919) 885-8101
TWX: 510-926-1516

OHIO
25575 Center Ridge Road
Cleveland 44145
Tel: (216) 835-0300
TWX: 810-427-9129

330 Progress Rd.
Dayton 45449
Tel: (513) 859-8202
TWX: 810-459-1925

1120 Morse Road
Columbus 43229
Tel: (614) 846-1300

OKLAHOMA
P.O. Box 32008
Oklahoma City 73132
Tel: (405) 721-0200
TWX: 910-830-6862

OREGON
17890 SW Boones Ferry Road
Tualatin 97062
Tel: (503) 620-3350
TWX: 910-467-8714

PENNSYLVANIA
2500 Moss Side Boulevard
Monroeville 15146
Tel: (412) 271-0724
TWX: 710-797-3650

1021 8th Avenue
King of Prussia Industrial Park
King of Prussia 19406
Tel: (215) 265-7000
TWX: 510-660-2670

RHODE ISLAND
873 Waterman Ave.
East Providence 02914
Tel: (401) 434-5535
TWX: 710-381-7573

***TENNESSEE**
Memphis
Tel: (901) 274-7472

TEXAS
P.O. Box 1270
201 E. Arapaho Rd.
Richardson 75080
Tel: (214) 231-6101
TWX: 910-867-4723

P.O. Box 27409
6300 Westpark Drive
Suite 100
Houston 77027
Tel: (713) 781-6000
TWX: 910-881-2645

231 Billy Mitchell Road
San Antonio 78226
Tel: (512) 434-4171
TWX: 910-871-1170

UTAH
2890 South Main Street
Salt Lake City 84115
Tel: (801) 487-0715
TWX: 910-925-5681

VIRGINIA
P.O. Box 6514
2111 Spencer Road
Richmond 23230
Tel: (803) 285-3431
TWX: 710-956-0157

WASHINGTON
Bellefield Office Pk.
1203 - 114th SE
Bellevue 98004
Tel: (206) 454-3971
TWX: 910-443-2303

***WEST VIRGINIA**
Charleston
Tel: (304) 345-1640

WISCONSIN
9431 W. Beloit Road
Suite 117
Milwaukee 53227
Tel: (414) 541-0550

FOR U.S. AREAS NOT LISTED:
Contact the regional office nearest you: Atlanta, Georgia . . . North Hollywood, California . . . Paramus, New Jersey . . . Skokie, Illinois. Their complete addresses are listed above.
*Service Only

CANADA

ALBERTA
Hewlett-Packard (Canada) Ltd.
11748 Kingsway Ave.
Edmonton
Tel: (403) 452-3670
TWX: 610-831-2431

BRITISH COLUMBIA
Hewlett-Packard (Canada) Ltd.
4608 Canada Way
North Burnaby 2
Tel: (604) 433-8213
TWX: 610-922-5059

MANITOBA
Hewlett-Packard (Canada) Ltd.
513 Century St.
Winnipeg
Tel: (204) 786-7581
TWX: 610-671-3531

NOVA SCOTIA
Hewlett-Packard (Canada) Ltd.
2745 Dutch Village Rd.
Suite 210
Halifax
Tel: (902) 455-0511
TWX: 610-271-4482

ONTARIO
Hewlett-Packard (Canada) Ltd.
1785 Woodward Dr.
Ottawa 3
Tel: (613) 255-6180, 255-6530
TWX: 610-562-8968

Hewlett-Packard (Canada) Ltd.
50 Galaxy Blvd.
Rexdale
Tel: (416) 677-9611
TWX: 610-492-4246

QUEBEC
Hewlett-Packard (Canada) Ltd.
275 Hymus Boulevard
Pointe Claire
Tel: (514) 697-4232
TWX: 610-422-3022
Telex: 01-20607

FOR CANADIAN AREAS NOT LISTED:
Contact Hewlett-Packard (Canada) Ltd. in Pointe Claire, at the complete address listed above.

CENTRAL AND SOUTH AMERICA

ARGENTINA
Hewlett-Packard Argentina S.A.C.e.I
Lavalle 1171 - 3°
Buenos Aires
Tel: 35-0436, 35-0627, 35-0341
Telex: 012-1009
Cable: HEWPACK ARG

BOLIVIA
Stambuk & Mark (Bolivia) LTDA.
Av. Mariscal, Santa Cruz 1342
La Paz
Tel: 40626, 53163, 52421
Telex: 3560014
Cable: BUKMAR

BRAZIL
Hewlett-Packard Do Brasil I.E.C. Ltda.
Rua Frei Caneca 1119
01307-**Sao Paulo**-SP
Tel: 288-7111, 287-5858
Telex: 309151/2/3
Cable: HEWPACK Sao Paulo

Hewlett-Packard Do Brasil I.E.C. Ltda.
Praca Dom Feliciano, 78
90000-**Porto Alegre**-RS
Rio Grande do Sul (RS) Brasil
Tel: 25-8470
Cable: HEWPACK Porto Alegre

Hewlett-Packard Do Brasil I.E.C. Ltda.
Rua da Matriz, 29
20000-**Rio de Janeiro**-GB
Tel: 266-2643
Telex: 210079 HEWPACK
Cable: HEWPACK Rio de Janeiro

CHILE
Héctor Calcagni y Cia, Ltda.
Casilla 16.475
Santiago
Tel: 423 96
Cable: CALCAGNI Santiago

COLOMBIA
Instrumentación
Henrik A. Langebaek & Kier S.A.
Carrera 7 No. 48-59
Apartado Aéreo 6287
Bogota, 1 D.E.
Tel: 45-78-06, 45-55-46
Cable: AARIS Bogota
Telex: 44400INSTCO

COSTA RICA
Lic. Alfredo Gallegos Gurdián
Apartado 10159
San José
Tel: 21-86-13
Cable: GALGUR San José

ECUADOR
Laboratorios de Radio-Ingenieria
Calle Guayaquil 1246
Post Office Box 3199
Quito
Tel: 212-496; 219-185
Cable: HORVATH Quito

EL SALVADOR
Electronic Associates
Apartado Postal 1682
Centro Comercial Gigante
San Salvador, El Salvador C.A.
Paseo Escalon 4649-4° Piso
Tel: 23-44-60, 23-32-37
Cable: ELECAS

GUATEMALA
IPESA
5a via 2-01, Zona 4
Guatemala City
Tel: 63-6-27 & 64-7-86
Telex: 4192 TELTRO GU

MEXICO
Hewlett-Packard Mexicana, S.A. de C.V.
Torres Adalid No. 21, 11° Piso
Col. del Valle
Mexico 12, D.F.
Tel: 543-42-32
Telex: 017-74-507

NICARAGUA
Roberto Terán G.
Apartado Postal 689
Edificio Terán
Managua
Tel: 3451, 3452
Cable: ROTERAN Managua

PANAMA
Electrónico Balboa, S.A.
P.O. Box 4929
Ave. Manuel Espinosa No. 13-50
Bldg. Alina
Panama City
Tel: 230833
Telex: 3481103, Curunda, Canal Zone
Cable: ELECTRON Panama City

PARAGUAY
Z. J. Melamed S.R.L.
Division: Aparatos y Equipos Medicos
Division: Aparatos y Equipos Scientificos y de Investigacion
P.O. Box 676
Chile, 482, Edificio Victoria
Asuncion
Tel: 4-5069, 4-6272
Cable: RAMEL

PERU
Compañia Electro Médica S.A.
Ave. Enrique Canaual 312
San Isidro
Casilla 1030
Lima
Tel: 22-3900
Cable: ELMED Lima

PUERTO RICO
San Juan Electronics, Inc.
P.O. Box 5167
Ponce de Leon 154
Pda. 3-PTA de Tierra
San Juan 00906
Tel: (809) 725-3342, 722-3342
Cable: SATRONICS San Juan
Telex: SATRON 3450 332

URUGUAY
Pablo Ferrando S.A.
Comercial e Industrial
Avenida Italia 2877
Casilla de Correo 370
Montevideo
Tel: 40-3102
Cable: RADIUM Montevideo

VENEZUELA
Hewlett-Packard de Venezuela C.A.
Apartado 50933
Edificio Segre
Tercera Transversal
Los Ruices Norte
Caracas 107
Tel: 35-00-11
Telex: 21146 HEWPACK
Cable: HEWPACK Caracas

FOR AREAS NOT LISTED,

CONTACT:
Hewlett-Packard
Inter-Americas
3200 Hillview Ave.
Palo Alto, California 94304
Tel: (415) 493-1501
TWX: 910-373-1267
Cable: HEWPACK Palo Alto
Telex: 034-8300, 034-8493

EUROPE

AUSTRIA
Hewlett-Packard Ges.m.b.H
Handelska 52/3
P.O. Box 7
A-1205 **Vienna**
Tel: (0222) 33 66 06 to 09
Cable: HEWPAK Vienna
Telex: 75923 hewpak a

BELGIUM
Hewlett-Packard Benelux
S.A./N.V.
Avenue de Col-Vert, 1,
(Groenkraaglaan)
B-1170 **Brussels**
Tel: (02) 72 22 40
Cable: PALOBEN Brussels
Telex: 23 494 paloben bru

DENMARK
Hewlett-Packard A/S
Datavej 38
OK-3460 **Birkerod**
Tel: (01) 81 66 40
Cable: HEWPACK AS
Telex: 166 40 hp as

Hewlett-Packard A/S
Torvet 9
DK-8600 **Silkeborg**
Tel: (06) 82-71-66
Telex: 166 40 hp as
Cable: HEWPACK AS

FINLAND
Hewlett-Packard Oy
Bulevardi 26
P.O. Box 12185
SF-00120 **Helsinki** 12
Tel: (90) 13730
Cable: HEWPACKOY Helsinki
Telex: 12-15363 hel

FRANCE
Hewlett-Packard France
Quartier de Courtaboeuf
Boite Postale No. 6
F-91401 **Orsay**
Tel: (1) 907 78 25
Cable: HEWPACK Orsay
Telex: 60048

Hewlett-Packard France
4 Quai des Etroits
F-69321 **Lyon Cedex** 1
Tel: (78) 42 63 45
Cable: HEWPACK Lyon
Telex: 31617

Hewlett-Packard France
29 rue de la Gare
F-31700 **Blagnac**
Tel: (61) 85 82 29
Telex: 51957

GERMAN FEDERAL REPUBLIC
Hewlett-Packard GmbH
Vertriebszentrale Frankfurt
Bernerstrasse 117
Postfach 560 140
0-6000 **Frankfurt** 56
Tel: (0611) 50 04-1
Cable: HEWPACKSA Frankfurt
Telex: 41 32 49 fra

Hewlett-Packard GmbH
Vertriebsbüro Böblingen
Herrenbergerstrasse 110
D-7030 **Böblingen**, Württemberg
Tel: (07031) 66 72 87
Cable: HEPAK Böblingen
Telex: 72 65 739 bbn

Hewlett-Packard GmbH
Vertriebsbüro Düsseldorf
Vogelsanger Weg 38
D-4000 **Düsseldorf**
Tel: (0211) 63 80 31/35
Telex: 85/86 533 hpdd d

Hewlett-Packard GmbH
Vertriebsbüro Hamburg
Wendenstr. 23
D-2000 **Hamburg** 1
Tel: (0411) 24 13 93
Cable: HEWPACKSA Hamburg
Telex: 21 63 032 hphh d

Hewlett-Packard GmbH
Vertriebsburo Hannover
Mellendorfer Strasse 3
0-3000 **Hannover** - Kleefeld
Tel: (0311) 55 06 26

Hewlett-Packard GmbH
Vertriebsbüro München
Unterhachinger Strasse 28
ISAR Center
D-8012 **Ottobrunn**
Tel: (0811) 601 30 61/7
Telex: 52 49 85
Cable: HEWPACKSA Müchen

(West Berlin)
Hewlett-Packard GmbH
Vertriebsbüro Berlin
Wilmersdorfer Strasse 113/114
D-1000 **Berlin W.** 12
Tel: (0311) 3137046
Telex: 18 34 05 hpbln d

GREECE
Kostas Karayannis
18, Ermou Street
GR-**Athens** 126
Tel: 3230-303, 3230-305
Cable: RAKAR Athens
Telex: 21 59 62 rkar gr

IRELAND
Hewlett-Packard Ltd.
224 Bath Road
GB-**Slough**, SL1 4 DS, Bucks
Tel: Slough (0753) 33341
Cable: HEWPIE Slough
Telex: 848413

Hewlett-Packard Ltd.
The Graftons
Stamford New Road
Altrincham, Cheshire, England
Tel: (061) 928-8626
Telex: 668068

ITALY
Hewlett-Packard Italiana S.p.A.
Via Amerigo Vespucci 2
I-20124 **Milan**
Tel: (2) 6251 (10 lines)
Cable: HEWPACKIT Milan
Telex: 32046

Hewlett-Packard Italiana S.p.A.
Piazza Marconi, 25
I-00144 **Rome** - Eur
Tel: (6) 5912544/5, 5915947
Cable: HEWPACKIT Rome
Telex: 61514

Hewlett-Packard Italiana S.p.A.
Vicolo Pastori, 3
I-35100 **Padova**
Tel: (49) 66 40 62
Telex: 32046 via Milan

Hewlett-Packard Italiana S.p.A.
Via Colli, 24
I-10129 **Turin**
Tel: (11) 53 82 64
Telex: 32046 via Milan

LUXEMBURG
Hewlett-Packard Benelux
S.A./N.V.
Avenue de Col-Vert, 1,
(Groenkraaglaan)
B-1170 **Brussels**
Tel: (03/02) 72 22 40
Cable: PALOBEN Brussels
Telex: 23 494

NETHERLANDS
Hewlett-Packard Benelux/N.V.
Weerdestein 117
P.O. Box 7825
NL-**Amsterdam**, Z1011
Tel: 020-42 77 77, 44 29 66
Cable: PALOBEN Amsterdam
Telex: 13 216 hepa nl

NORWAY
Hewlett-Packard Norge A/S
Nesveien 13
Box 149
N-1344 **Haslum**
Tel: (02) 53 83 60
Telex: 16621 hpnas n

PORTUGAL
Telectra-Empresa Técnica de
Eléctricos S.a.r.l.
Rua Rodrigo da Fonseca 103
P.O. Box 2531
P-**Lisbon** 1
Tel: (19) 68 60 72
Cable: TELECTRA Lisbon
Telex: 1598

SPAIN
Hewlett-Packard Española, S.A.
Jerez No 8
E-**Madrid** 16
Tel: 458 26 00
Telex: 23515 hpe

Hewlett-Packard Española, S.A.
Milanesado 21-23
E-**Barcelona** 17
Tel: (3) 203 62 00
Telex: 52603 hpbe e

SWEDEN
Hewlett-Packard Sverige AB
Enighetsvägen 1-3
Fack
S-161 20 **Bromma** 20
Tel: (08) 98 12 50
Cable: MEASUREMENTS
Stockholm
Telex: 10721

Hewlett-Packard Sverige AB
Hagakersgatan 9C
S-431 41 **Mölndal**
Tel: (031) 27 68 00/01
Telex: Via Bromma

SWITZERLAND
Hewlett Packard (Schweiz) AG
Zürcherstrasse 20
P.O. Box 64
CH-8952 Schlieren **Zurich**
Tel: (01) 98 18 21/24
Cable: HPAG CH
Telex: 53933 hpag ch

Hewlett-Packard (Schweiz) AG
9, Chemin Louis-Pictet
CH-1214 Vernier—**Geneva**
Tel: (022) 41 4950
Cable: HEWPACKSA Geneva
Telex: 27 333 hpsa ch

TURKEY
Telekom Engineering Bureau
Saglik Sok No. 15/1
Ayaspasa-Beyoglu
P.O. Box 437 Beyoglu
TR-**Istanbul**
Tel: 49 40 40
Cable: TELEMATION Istanbul

UNITED KINGDOM
Hewlett-Packard Ltd.
224 Bath Road
GB-**Slough**, SL1 4 DS, Bucks
Tel: Slough (0753) 33341
Cable: HEWPIE Slough
Telex: 848413

Hewlett-Packard Ltd.
"The Graftons"
Stamford New Road
GB-**Altrincham**, Cheshire
Tel: (061) 928-8626
Telex: 668068

Hewlett-Packard Ltd's registered address for V.A.T. purposes only:
70, Finsbury Pavement
London, EC2A1SX
Registered No: 690597

SOCIALIST COUNTRIES PLEASE CONTACT:
Hewlett-Packard Ges.m.b.H.
Handelskai 52/3
P.O. Box 7
A-1205 **Vienna**
Ph: (0222) 33 66 06 to 09
Cable: HEWPACK Vienna
Telex: 75923 hewpak a

ALL OTHER EUROPEAN COUNTRIES CONTACT:
Hewlett-Packard S.A.
Rue du Bois-du-Lan 7
P.O. Box 85
CH-1217 Meyrin 2 **Geneva**
Switzerland
Tel: (022) 41 54 00
Cable: HEWPACKSA Geneva
Telex: 2 24 86

AFRICA, ASIA, AUSTRALIA

ANGOLA
Telectra-Empresa Tecnica
de Equipamentos Electricos
SARL
Rua de Barbosa, Rodrigues,
42-1°, D1°
P.O. Box 6487
Luanda
Cable: TELECTRA Luanda

AUSTRALIA
Hewlett-Packard Australia
Pty. Ltd.
22-26 Weir Street
Glen Iris, 3146
Victoria
Tel: 20-1371 (6 lines)
Cable: HEWPARD Melbourne
Telex: 31 024

Hewlett-Packard Australia
Pty. Ltd.
31 Bridge Street
Pymble,
New South Wales, 2073
Tel: 449 6566
Telex: 21561
Cable: HEWPARD Sydney

Hewlett-Packard Australia
Pty. Ltd.
97 Churchill Road
Prospect 5082
South Australia
Tel: 44 8151
Cable: HEWPARD Adelaide

Hewlett-Packard Australia
Pty. Ltd.
1st Floor, Suite 12/13
Casablanca Buildings
196 Adelaide Terrace
Perth, W.A. 6000
Tel: 25-6800
Cable: HEWPARD Perth

Hewlett-Packard Australia
Pty. Ltd.
10 Woolley Street
P.O. Box 191
Dickson A.C.T. 2602
Tel: 49-8194
Cable: HEWPARD Canberra ACT

Hewlett-Packard Australia
Pty. Ltd.
2nd Floor, 49 Gregory Terrace
Brisbane, Queensland, 4000
Tel: 29 1544

CEYLON
United Electricals Ltd.
P.O. Box 681
60, Park St.
Colombo 2
Tel: 26696
Cable: HDTPOINT Colombo

CYPRUS
Kypronics
19 Gregorios & Xenopoulos Road
P.O. Box 1152
CY-**Nicosia**
Tel: 45628/29
Cable: KYPRONICS PANDEHIS

ETHIOPIA
African Salespower & Agency
Private Ltd., Co.
P. O. Box 718
58/59 Cunningham St.
Addis Ababa
Tel: 12285
Cable: ASACO Addisababa

HONG KONG
Schmidt & Co. (Hong Kong) Ltd.
P.O. Box 297
1511, Prince's Building
15th Floor
10, Chater Road
Hong Kong
Tel: 240168, 232735
Telex: HX4766 SCHMCO
Cable: SCHMIDTCO Hong Kong

INDIA
Blue Star Ltd.
Kasturi Buildings
Jamshedji Tata Rd.
Bombay 400 020
Tel: 29 50 21
Telex: 3751
Cable: BLUEFROST

Blue Star Ltd.
Sahas
414/2 Vir Savarkar Marg
Prabhadevi
Bombay 400 025
Tel: 45 73 01
Telex: 3751
Cable: BLUESTAR

Blue Star Ltd.
14/40 Civil Lines
Kampur 208 001
Tel: 6 88 82
Cable: BLUESTAR

Blue Star, Ltd.
7 Hare Street
P.O Box 506
Calcutta 700 001
Tel: 23-0131
Telex: 655
Cable: BLUESTAR

Blue Star Ltd.
Blue Star House,
34 Ring Road
Lajpat Nagar
New Delhi 110 024
Tel: 62 32 76
Telex: 463
Cable: BLUESTAR

Blue Star, Ltd.
Blue Star House
11/11A Magarath Road
Bangalore 560 025
Tel: 51473
Telex: 430
Cable: BLUESTAR

Blue Star, Ltd.
1-1-117/1
Sarojini Devi Road
Secunderabad 500 003
Tel: 7 63 91, 7 73 93
Cable: BLUEFROST
Telex: 459

Blue Star, Ltd.
23/24 Second Line Beach
Madras 600 001
Tel: 2 39 55
Telex: 379
Cable: BLUESTAR

Blue Star, Ltd.
1B Kaiser Bungalow
Dindli Road
Jamshedpur 831 001
Tel: 38 04
Cable: BLUESTAR
Telex: 240

INDONESIA
Bah Bolon Trading Coy. N.V.
Djalah Merdeka 29
Bandung
Tel: 4915; 51560
Cable: ILMU
Telex: 08-809

IRAN
Multicorp International Ltd.
Avenue Soraya 130
P.O. Box 1212
IR-**Teheran**
Tel: 83 10 35-39
Cable: MULTICORP Tehran
Telex: 2893 MCI TN

ISRAEL
Electronics & Engineering
Div. of Motorola Israel Ltd.
17 Aminadav Street
Tel-Aviv
Tel: 36941 (3 lines)
Cable: BASTEL Tel-Aviv
Telex: 33569

JAPAN
Yokogawa-Hewlett-Packard Ltd.
Ohashi Building
1-59-1 Yoyogi
Shibuya-ku, Tokyo
Tel: 03-370-2281/92
Telex: 232-2024YHP
Cable: YHPMARKET TOK 23-724

Yokogawa-Hewlett-Packard Ltd.
Nisei Ibaragi Bldg.
2-2-8 Kasuga
Ibaragi-Shi
Osaka
Tel: (0726) 23-1641
Telex: 5332-385 YHP DSAKA

Yokogawa-Hewlett-Packard Ltd.
Nakamo Building
No. 24 Kamisasazima-cho
Nakamura-ku, **Nagoya** City
Tel: (052) 571-5171

Yokogawa-Hewlett-Packard Ltd.
Nitto Bldg.
2-4-2 Shinohara-Kita
Kohoku-ku
Yokohama 222
Tel: 045-432-1504
Telex: 382-3204 YHP YDK

Yokogawa-Hewlett-Packard Ltd.
Chuo Bldg.
Rm. 603 3,
2-Chome
IZUMI-CHO,
Mito, 310
Tel: 0292-25-7470

KENYA
Kenya Kinetics
P.O. Box 18311
Nairobi, Kenya
Tel: 57726
Cable: PROTON

KOREA
American Trading Company
Korea,
I.P.O. Box 1103
Dae Kyung Bldg., 8th Floor
107 Sejong-Ro,
Chongro-Ku, **Seoul**
Tel: (4 lines) 73-8924-7
Cable: AMTRACO Seoul

LEBANON
Constantin E. Macridis
P.O. Box 7213
RL-**Beirut**
Tel: 220846
Cable: ELECTRONUCLEAR Beirut

MALAYSIA
MECOMB Malaysia Ltd.
2 Lorong 13/6A
Section 13
Petaling Jaya, **Selangor**
Cable: MECOMB Kuala Lumpur

MOZAMBIQUE
A.N. Goncalves, Lta.
162, Av. D. Luis
P.O. Box 107
Lourenco Marques
Tel: 27091, 27114
Telex: 6-203 Negon Mo
Cable: NEGON

NEW ZEALAND
Hewlett-Packard (N.Z.) Ltd.
94-96 Dixon Street
P.O. Box 9443
Courtenay Place,
Wellington
Tel: 59-559
Telex: 3898
Cable: HEWPACK Wellington

Hewlett-Packard (N.Z.) Ltd.
Pakuranga Professional Centre
267 Pakuranga Highway
Box 51092
Pakuranga
Tel: 569-651
Cable: HEWPACK, Auckland

NIGERIA
TEIL (Masacon Division)
25 Moronu Street, Suru-Lere,
P.O. Box 5707
Lagos
Tel: 34545
Cable: THETEIL Lagos

PAKISTAN
Mushko & Company, Ltd.
Oosman Chambers
Abdullah Haroon Road
Karachi 3
Tel: 511027, 512927
Cable: COOPERATOR Karachi

Mushko & Company, Ltd.
38B, Satellite Town
Rawalpindi
Tel: 41924
Cable: FEMUS Rawalpindi

PHILIPPINES
Electromex, Inc.
6th Floor, Amalgamated
Development Corp. Bldg.
Ayala Avenue, Makati, Rizal
C.C.P.O. Box 1028
Makati, Rizal
Tel: 86-18-87, 87-76-77,
87-86-88, 87-18-45, 88-91-71,
83-81-12, 83-82-12
Cable: ELEMEX Manila

SINGAPORE
Mechanical and Combustion
Engineering Company Ltd.
10/12, Jalan Kilang
Red Hill Industrial Estate
Singapore, 3
Tel: 647151 (7 lines)
Cable: MECOMB Singapore

Hewlett-Packard Far East
Area Office
P.O. Box 87
Alexandra Post Office
Singapore 3
Tel: 633022
Cable: HEWPACK SINGAPORE

SOUTH AFRICA
Hewlett Packard South Africa
(Pty.), Ltd.
P.O. Box 31716
Braamfontein Transvaal
Milnerton
30 **De Beer** Street
Johannesburg
Tel: 725-2080, 725-2030
Telex: 0226 JH
Cable: HEWPACK Johannesburg

Hewlett Packard South Africa
(Pty.), Ltd.
Breecastle House
Bree Street
Cape Town
Tel: 2-6941/2/3
Cable: HEWPACK Cape Town
Telex: 0006 CT

Hewlett Packard South Africa
(Pty.), Ltd.
641 Ridge Road, Durban
P.O. Box 99
Overport, Natal
Tel: 88-6102
Telex: 567954
Cable: HEWPACK

TAIWAN
Hewlett Packard Taiwan
39 Chung Shiao West Road
Sec. 1
Overseas Insurance
Corp. Bldg. 7th Floor
Taipei
Tel: 389160,1,2, 375121,
Ext. 240-249
Telex: TP824 HEWPACK
Cable: HEWPACK Taipei

THAILAND
UNIMESA Co., Ltd.
Chongkoinee Building
56 Suriwongse Road
Bangkok
Tel: 37956, 31300, 31307,
37540
Cable: UNIMESA Bangkok

UGANDA
Uganda Tele-Electric Co., Ltd.
P.O. Box 4449
Kampala
Tel: 57279
Cable: COMCO Kampala

VIETNAM
Peninsular Trading Inc.
P.O. Box H-3
216 Hien-Vuong
Saigon
Tel: 20-805, 93398
Cable: PENTRA, SAIGON 242

ZAMBIA
R. J. Tilbury (Zambia) Ltd.
P.O. Box 2792
Lusaka
Zambia, Central Africa
Tel: 73793
Cable: ARJAYTEE, Lusaka

MEDITERRANEAN AND MIDDLE EAST COUNTRIES NOT SHOWN PLEASE CONTACT:
Hewlett-Packard
Co-ordination Office for
Mediterranean and Middle
East Operations
Piazza Marconi 25
I-00144 Rome-Eur, Italy
Tel: (6) 59 40 29
Cable: HEWPACKIT Rome
Telex: 61514

OTHER AREAS NOT LISTEO, CONTACT:
Hewlett-Packard
Export Trade Company
3200 Hillview Ave.
Palo Alto, California 94304
Tel: (415) 326-7000
(Feb. 71 493-1501)
TWX: 910-373-1267
Cable: HEWPACK Palo Alto
Telex: 034-8300, 034-8493

MODEL 9865A CASSETTE MEMORY

PERIPHERAL MANUAL

PART NO. 09865-90000
MICROFICHE NO. 09865-99000

PRINTED IN U.S.A.
OCTOBER 1973